 




STANDARD ACID BATTERY- MAINTENANCE

CHARGE: STEP 1

CHECK BATTERY STATUS AT THE TOP OF THE HMI



CHARGE: STEP 2

DO NOT CHARGE IF BATTERY IS ABOVE 6 BARS.

CHARGE WHEN YOU REACH 2 BARS

CHARGE: STEP 3

SWITCH MACHINE OFF, LIFT BATTERY COVER, INSERT CABLE INTO AN OUTLET AND CHARGE TO 100%. DO NOT PLACE CABLE ON TOP OF BATTERIES

WATER LEVEL

DEPENDING ON USAGE, REGULARLY ADD DISTILLED WATER TO REFILL LIQUID LEVEL 1/4" ABOVE BATTERY PLATES

STORAGE

STORE IN FULLY CHARGED CONDITION. DISCONNECT BATTERY FROM ROBOT BEFORE STORAGE. FULLY RECHARGE EVERY 2 MONTHS

